

D & D

**DOUBLE & DUAL OUTDOOR
ADVANCED ASIC
PASSIVE INFRARED
INTRUSION DETECTOR**



**INSTALLATION INSTRUCTIONS
P/N: 7101143**

SELECTING MOUNTING LOCATION

Choose a location most likely to intercept an intruder. See detection patterns in figures at p.p.12,13.

MOUNTING LOCATION

The detector can be wall or corner mounted without swivel bracket.

NOTE:

Recommended installation height is 2.1m.

The D&D is more sensitive to motion across its field of view than to motion to and from it. Mounting height and location should not cause the D&D to exceed its estimated detection range. It should utilize existing elements to attain a stable background, by facing walls and solid fences.

While the D&D is capable of detecting intrusions under difficult conditions, it is recommended to install a covering roof against weather elements (rain, snow) and protection against direct sunlight.

- Please make sure the lens is right side up. The lens has an arrow on it and the housing has a slit.
- To re-fit the housing (and PCB), insert its left into the groove on the left wall of the housing, pull or push out the right wall and gently snap the board into position. The vertical calibration scale on the right side of the board should be directly under the marker in the middle of the right wall. Calibrate the PCB with its housing according to the mounting height and the tables p.p.14,15.
- In areas affected by heavy rains the cable entry hole should be **open** - for cable only (sealant free).
- In areas affected by heavy dust the cable entry hole should be sealed with RTV/SILICON or similar sealant.

GENERAL DESCRIPTION

Crow Electronic Engineering Ltd. presents D&D, the new PIR detector, intended for operation in difficult conditions.

D&D achieves unprecedented signal differentiation, while its powerful ASIC (Application Specific Integrated Chip) microcontroller analyses the signal sensed by TWIN DUAL ELEMENT PIR detectors to minimize the rejection of false alarms and to determine intrusions.

- The ASIC guarantees constant filtering at all gain levels, without degradation of the signal to noise ratio, using embedded analog multiplier and signal processing.
- The ASIC provide multiplier self test mode on every operation to ensure complete functionality of the detector.
- The ASIC ensures maximum protection against RFI and EMI disturbances.

Avoid the following location:


- Facing direct sunlight
- Facing reflective surfaces such as swimming pool, shiny painted surfaces, puddles, etc.
- Mounting surfaces that absorb heat (black walls) metal gates or fences, hot water pipes, etc.
- Areas that are susceptible to a rapid change of temperature - radiators, etc.
- Sources of air currents - air conditioning openings, ventilation ducts, etc.
- Above a window or a door.
- Area with moving objects (swaying trees, bushes, etc.).

IMPORTANT:

Where a small animal is present, the D&D **MUST** be mounted 2.1m (7ft) or higher (max. 3.0m /10 ft) above floor level.

TERMINAL BLOCK WIRING

Run the cable through the cable entry hole and connect the wires in accordance with the following instructions:

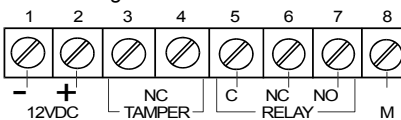

Terminal 1 - Marked - (GND) Connect to a negative Voltage output of ground of the control panel.

Terminal 2 - Marked + (+V) Connect to a positive Voltage output of an 8.7 - 16Vdc source (usually from the alarm control unit).

Terminal 3 & 4 - Marked TAMPER.

If a Tamper switch is required connect these terminals to a 24hour normally closed protective zone in the control unit. If the front cover of the detector is opened, an immediate alarm signal will be sent to the control unit.

- The D&D include an enhanced bi-directional temperature compensation, which provides constant detection of human body at ambient temperature range from -20°C to +50°C (-4°F to +122°F). While most PIRs fail to detect an intruder when background temperature nears body temperature, the D&D proves to be fully effective in differentiating between them.
- The ASIC based D&D allows identical detection from left to right and right to left when crossing zones.
- The D&D provides an ultimate monitoring of the protected site, together with automatic updating and self reconfiguring according to the environmental changes.

MOUNTING THE DETECTOR

A variety of mounting positions are possible with the standard housing of the D&D.

To open the front cover of the housing:

- Pry off the front cover and unscrew the four screws of the integral gray cover and remove the cover.
- Remove the PC board housing (and the board) by pushing the right wall of the housing outward and gently lifting out the PC board housing.
- Prepare mounting holes in accordance with the desired mounting position. Cover all openings for screws with RTV/SILICON or similar sealant.
- A special opening for cable entry is provided in the D&D. Be sure to use this, and only this opening, for wires.

Terminal 5 - marked C . This is the central output relay contact used with Terminal 6 or 7.

Terminal 6 - Marked N.C. This is the normally closed alarm output relay contact of the detector. With Terminal 5, these two terminals should be connected to a normally closed zone in the control panel.

Terminal 7 - Marked N.O. (Optional only, is manufactured according special application.) This is the normally open alarm output relay contact of the detector. With Terminal 5, these allow the D&D to be connected to a control panel that requires a balanced end of line resistor configuration. If such a control panel is not used the N.O. Terminals have many other uses: it may be used to trigger a timer to operate security lighting, etc.


Terminal 8 - Marked M (memory) See explanation under MEMORY FUNCTION LATCH SETTING.

MEMORY FUNCTION - LATCH SETTING


The alarm memory function allows the identification of an alerting detector out of multiple detectors connected to one (or the same) zone of the control panel. To enable this function, connect (switch on) the M terminal to a switched +12 to +16V_{DC} source (e.g. Arm / Disarm voltage output from the control panel.)

- In case of an alarm, the memory function stores the alarm event in the detector.
- To identify the detector that alarmed, disconnect (switch off) (grounded) the voltage from M terminal.
- The LED of the detector with the alarm event in memory will light constantly until memory function is reset.
- To reset the memory function, switch on and switch off the M terminal.

LONG RANGE (02DD) LENS

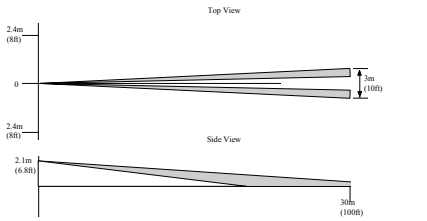

VERTICAL CURTAIN (03DD) LENS

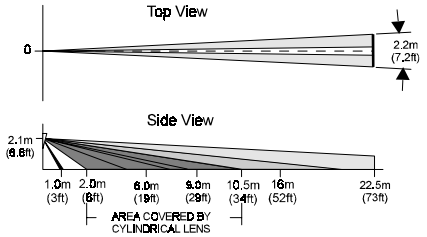

TECHNICAL SPECIFICATIONS

Power Input	8.7 - 16 Vdc
Current Consumption	
Standby	13 mA @ 12 Vdc
Active	8.5 mA @ 12 Vdc
Sensitivity	Δ1.1°C @ 0.9 m/sec (Δ2°F @ 3 ft/sec)
Alarm Output	N.C. 100 mA @ 24 Vdc (10 Ω in line resistor Form "A")
Tamper switch	N.C. 100 mA @ 24 Vdc (10 Ω in line resistor Form "A")
Operating ambient temperature range	-20°C to +50°C (-4°F to +122°F)
Operating humidity range	Up to 95% (non-condensing)
Storage temperature range	-40°C to +80°C (-40°F to +176°F)
Pyrosensorelectrics	2 matching dual element with double optic system
RFI protection	≥30 V/m @ 10-1000 MHz
EMI immunity	50,000 V electrical interference due to power surges or lightning
Self test	12 sec indicated 8 LED flashes
Dimensions	135mm (5.3") x 85mm (3.4") x 43.4mm (1.7")
Weight	150 gr (4.2 oz)

Crow reserves the rights to change specifications without prior notice

DIP SWITCH SETTING

DIP-SWITCH 1 - NORMAL / HIGH RISK

- Dipswitch 1 provides control for normal or high risk operating environments.
- ON (up) - This setting is for a harsh environment with air drafts.
- OFF (down) - This setting is for operation within a stable environment (without air drafts).

DIP-SWITCH 2 - LED ENABLE / DISABLE

- ON (up) - the LED is DISABLED.
 - OFF (down) - the LED is Enabled.
- The LED ENABLE / DISABLE switch has no effect on the RELAY output.

D&D VERTICAL CALIBRATION CHARTS

EXTRA WIDE ANGLE (01DD) LENS

Vert Scale Mt. Height	+5	+4	+3	+2	+1	0	-1	-2	-3	-4	-5
1.0 m (3.3 ft)	3 (9.9)	3.5 (11.6)	4.0 (13.2)	5.0 (16.5)	6.0 (19.8)	8.0 (26.4)	9.5 (31.4)	11.0 (36.3)	12.5 (41.3)	14.5 (47.9)	16.5 (54.5)
1.2 m (4 ft)	3.5 (9.9)	4.0 (11.6)	5.0 (13.2)	6.0 (16.5)	8.0 (19.8)	9.5 (26.4)	11.0 (31.4)	12.5 (36.3)	14.5 (41.3)	16.5 (47.9)	18.0 (54.5)
1.5 m (5 ft)	4.0 (9.9)	5.0 (11.6)	6.0 (13.2)	8.0 (16.5)	9.5 (19.8)	11.0 (26.4)	12.5 (31.4)	14.5 (36.3)	16.5 (41.3)	18.0 (47.9)	Over Range
1.8 m (6 ft)	5.0 (9.9)	6.0 (11.6)	8.0 (13.2)	9.5 (16.5)	11.0 (19.8)	12.5 (26.4)	14.5 (31.4)	16.5 (36.3)	18.0 (41.3)	Over Range	Over Range
2.1 m (7 ft)	6.0 (9.9)	8.0 (11.6)	9.5 (13.2)	11.0 (16.5)	12.5 (19.8)	14.5 (26.4)	16.5 (31.4)	18.0 (36.3)	Over Range	Over Range	Over Range
2.4 m (8 ft)	8.0 (9.9)	9.5 (11.6)	11.0 (13.2)	12.5 (16.5)	14.5 (19.8)	16.5 (26.4)	18.0 (31.4)	Over Range	Over Range	Over Range	Over Range
2.7 m (9 ft)	9.5 (9.9)	11.0 (11.6)	12.5 (13.2)	14.5 (16.5)	16.5 (19.8)	18.0 (26.4)	Over Range	Over Range	Over Range	Over Range	Over Range
3.0 m (10 ft)	11.0 (9.9)	12.5 (11.6)	14.5 (13.2)	16.5 (16.5)	18.0 (19.8)	Over Range	Over Range	Over Range	Over Range	Over Range	Over Range

CROW LIMITED WARRANTY

(Crow) warrants this product to be free from defects in materials and workmanship under normal use and service for a period of one year from the last day of the week and year whose numbers are printed on the printed circuit board inside this product. Crow's obligation is limited to repairing or replacing this product, at its option, free of charge for materials or labor, if it is proved to be defective in materials or workmanship under normal use and service. Crow shall have no obligation under this Limited Warranty or otherwise if the product is altered or improperly repaired or serviced by anyone other than Crow.


There are no warranties, expressed or implied, of merchantability or fitness for a particular purpose or otherwise, which extend beyond the description on the face hereof. In no case shall Crow be liable to anyone for any consequential or incidental damages for breach of this or any other warranty, expressed or implied, or upon any other basis of liability whatsoever, even if the loss or damage is caused by Crow's own negligence or fault.

Crow does not represent that this product can not be compromised or circumvented; that this product will prevent any person injury or property loss or damage by burglary, robbery, fire or otherwise; or that this product will in all cases provide adequate warning or protection. Purchaser understands that a property installed and maintained product can only reduce the risk of burglary, robbery or other events occurring without providing an alarm, but it is not insurance or a guarantee that such will not occur or that there will be no personal injury or property loss or damage as a result. Consequently, Crow shall have no liability for any personal injury, property damage or any other loss based on claim that this product failed to give any warning. However, if Crow is held liable, whether directly or indirectly, for any loss or damage arising under this limited warranty or otherwise, regardless of cause or origin, Crow's maximum liability shall not in any case exceed the purchase price of this product, which shall be the complete and exclusive remedy against Crow.



N345

VERTICAL CALIBRATION LENS PATTERN EXTRA WIDE ANGLE (01DD) LENS

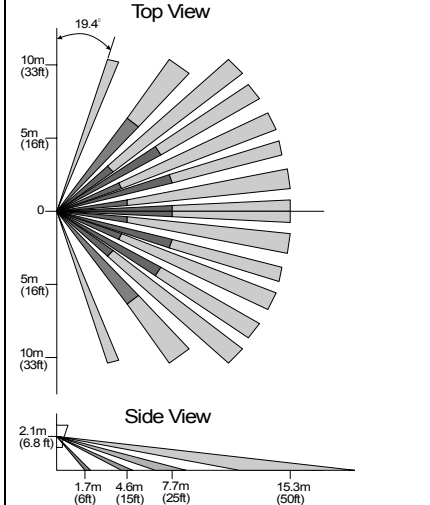

LONG RANGE (02DD) LENS

Vert Scale Mt. Height	+5	+4	+3	+2	+1	0	-1	-2	-3	-4	-5
1.0 m (3.3 ft)	5.0 (16.5)	6.0 (19.8)	7.0 (23.1)	8.0 (26.4)	10.0 (33)	12.0 (39.6)	14.0 (46.2)	16.0 (52.8)	18.5 (61.1)	22.0 (72.6)	25.0 (82.5)
1.2 m (4 ft)	6.0 (16.5)	7.0 (19.8)	8.0 (23.1)	10.0 (26.4)	12.0 (33)	14.0 (39.6)	16.0 (46.2)	18.5 (52.8)	22.0 (61.1)	25.0 (72.6)	29.0 (95.7)
1.5 m (5 ft)	7.0 (16.5)	8.0 (19.8)	10.0 (23.1)	12.0 (26.4)	14.0 (33)	16.0 (39.6)	18.5 (46.2)	22.0 (52.8)	25.0 (61.1)	29.0 (72.6)	30.5 (100.7)
1.8 m (6 ft)	8.0 (16.5)	10.0 (19.8)	12.0 (23.1)	14.0 (26.4)	16.0 (33)	18.5 (39.6)	22.0 (46.2)	25.0 (52.8)	29.0 (61.1)	30.5 (72.6)	Over Range
2.1 m (7 ft)	10.0 (16.5)	12.0 (19.8)	14.0 (23.1)	16.0 (26.4)	18.5 (33)	22.0 (39.6)	25.0 (46.2)	29.0 (52.8)	30.5 (61.1)	Over Range	Over Range
2.4 m (8 ft)	12.0 (16.5)	14.0 (19.8)	16.0 (23.1)	18.5 (26.4)	22.0 (33)	25.0 (39.6)	29.0 (46.2)	30.5 (52.8)	Over Range	Over Range	Over Range
2.7 m (9 ft)	14.0 (16.5)	16.0 (19.8)	18.5 (23.1)	22.0 (26.4)	25.0 (33)	29.0 (39.6)	30.5 (46.2)	Over Range	Over Range	Over Range	Over Range
3.0 m (10 ft)	16.0 (16.5)	18.5 (19.8)	22.0 (23.1)	25.0 (26.4)	29.0 (33)	30.5 (39.6)	Over Range	Over Range	Over Range	Over Range	Over Range

VERTICAL CURTAIN (03DD) LENS

Vert Scale Mt. Height	+5	+4	+3	+2	+1	0	-1	-2	-3	-4
1.0 m (3.3 ft)	3.0 (9.9)	4.0 (13.2)	5.0 (16.5)	6.0 (19.8)	8.0 (26.4)	10.0 (33)	13.0 (42.9)	16.5 (54.5)	19.5 (64.4)	22.5 (74.3)
1.2 m (4 ft)	4.0 (9.9)	5.0 (13.2)	6.0 (16.5)	8.0 (19.8)	10.0 (26.4)	13.0 (42.9)	16.5 (54.5)	19.5 (64.4)	22.5 (74.3)	Over Range
1.5 m (5 ft)	5.0 (9.9)	6.0 (13.2)	8.0 (16.5)	10.0 (19.8)	13.0 (26.4)	16.5 (42.9)	19.5 (54.5)	22.5 (64.4)	Over Range	Over Range
1.8 m (6 ft)	6.0 (9.9)	8.0 (13.2)	10.0 (16.5)	13.0 (19.8)	16.5 (26.4)	19.5 (42.9)	22.5 (54.5)	25.0 (64.4)	Over Range	Over Range
2.1 m (7 ft)	8.0 (9.9)	10.0 (13.2)	13.0 (16.5)	16.5 (19.8)	19.5 (26.4)	22.5 (42.9)	25.0 (54.5)	29.0 (64.4)	Over Range	Over Range
2.4 m (8 ft)	10.0 (9.9)	13.0 (13.2)	16.5 (16.5)	19.5 (19.8)	22.5 (26.4)	25.0 (42.9)	29.0 (54.5)	30.5 (64.4)	Over Range	Over Range
2.7 m (9 ft)	13.0 (9.9)	16.5 (13.2)	19.5 (16.5)	22.5 (19.8)	25.0 (26.4)	29.0 (42.9)	30.5 (54.5)	Over Range	Over Range	Over Range
3.0 m (10 ft)	16.5 (9.9)	19.5 (13.2)	22.5 (16.5)	25.0 (19.8)	29.0 (26.4)	30.5 (42.9)	Over Range	Over Range	Over Range	Over Range

CROW ELECTRONIC ENGINEERING LTD.

ISRAEL: 57 Hamelacha St., Holon 58855
Tel: 972-3-5569937 / 8 / 9
Fax: 972-3-5592981
E-MAIL : support@crow.co.il

USA: 2160 North Central Road,
Fort Lee, N.J. 07024
Tel: 1-800-GET CROW
or (201) 944 0005
Fax: (201) 944 1199

AUSTRALIA: 429 Nepean Hwy. Brighton East, Vic. 3187
Tel: 61-3-9596 7222
Fax: 61-3-9596 0888

UK: Unit 5, Bradford on Avon Marina
Widbrook Bradford on Avon
Wiltshire BA15 1UD
Tel: 1225 863 138
Fax: 1225 863 171

POLAND: VIDICON 01-199 Warsaw
Ul. Leszno 34/36
Tel: 48 22 632 9666
Fax: 48 22 632 5543

These instructions supersede all previous issues in circulation prior to Feb. 1999